

Guide only

Before Starting

1. Read and understand the Hazard Assessment sheet.
2. Ensure the unit is only used on flat level ground.
3. Do not exceed the maximum capacity of the Hoist. Only use chains, ropes, etc that adequately rated.

Specifications

Max Load: 500kg
Max Lift: 2m (to hook)

Transport:

Ute/Van/Trailer.

Assembly Instructions

1. Connect Hoist upright, connect supporting arms.
2. Attach crane arm.
3. Attach the jack.
4. Ensure the jack release valve is closed.

Mandatory Personal Protective Equipment:



Foot
Protection

Trouble Shooting

Problem	Possible Solution
Not Lifting	Check bleed valve on jack is closed

Do not under any circumstances attempt any repairs. Call your local HireDepot office.

This operating and safety brochure is intended as a guide only. It does not override license requirements nor is it suitable as an operating lesson.

If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.