

## Cherry picker

*(Guide only)*

### BEFORE USE (VERY IMPORTANT)

1. Read and understand the hazard assessment sheet.
2. Persons using this machine must be a licensed or competent experienced operator.
3. Ensure area is suitable for operation of the cherry picker.

### TOWING

**(NOTE: Failure to follow the steps below may result in the machine overturning or serious injury.)**

1. Ensure wheels are in the extended position. This will mean that the wheels are the widest points on the machine.
2. Ensure the towball attachment is secure and the safety chain and emergency brake wire is secured to the vehicle.
3. Maximum towing speed of 80 kph.

### MACHINE SETUP - IMPORTANT POINTS

1. Disconnect machine from vehicle before use. Failure to do so may break the tow ball clip.
2. When setting the machine up, lower the front outriggers first. When packing machine up, raise the rear outriggers first. Failure to do so may break or damage front jockey wheel.
3. Rear light bar may need to be removed, especially if transporting the machine through narrow pathways.

### MACHINE SETUP

1. Ensure all red stop buttons are not pressed in. Rotate each clockwise, and pull out.
2. Insert the three keys into their corresponding keyholes. Start the engine and let run for 3 minutes. Leave the engine key in the 'on' position. Turn the key in bucket to the on ( I ) position.
3. Turn the ground control key to:  
( I ) when operating the outriggers.  
( O ) when using controls in bucket.
4. When operating any of the controls, ensure the closest green button is depressed. For the outrigger controls, the equivalent green button is a lever located to the right of the outrigger controls.
5. Lower the front outriggers so that the jockey wheel is off the ground. Lower the rear outriggers. Adjust heights of outriggers to make machine level. Ensure all outriggers are taking load, and not just resting on ground.

### MACHINE PACKUP

To pack the machine up follow the reverse of the setup whilst taking note of the following:

1. Ensure wheels are in towing position.
2. When lowering bucket, ensure the lug on the underside of the boom arm is seated properly in position.
3. Raise the rear outriggers first.
4. Remove all keys before transport.

### CHARGING THE MACHINE

Do not use machine whilst connected to mains power. Failure to do so may result in damage to the machine. Do not use extension leads greater than 25 metres.

<b>TROUBLESHOOTING</b>	
<b>Problem</b>	<b>Possible solution</b>
Alarm sounds when operating bucket controls.	1. Lower bucket and ensure machine is level and all outriggers are bearing load. 2. Ensure machine has enough charge.
Unsure about correct operating instructions.	Call your local Hiredepot branch.

**Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.**

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.