

Engine hoist

(Guide only)

Before use:

- Read and understand the hazard assessment sheet.
- Ensure the unit is only used on flat, level ground.
- Do not exceed maximum capacity of the hoist. Only use chains, ropes etc. that are adequately rated.
- Ensure the working area is clear of obstructions, powerlines and all other hazards.

SPECIFICATIONS

Max load: 500kg
Max lift: 2m (to hook)

TRANSPORT

Ute / van / trailer.

ASSEMBLY INSTRUCTIONS

1. Connect hoist upright, connect supporting arms.
2. Attach crane arm.
3. Attach the jack.
4. Ensure the jack release valve is closed.

MANDATORY PERSONAL PROTECTIVE EQUIPMENT



TROUBLESHOOTING

Problem: Not lifting.
Possible solution: Check bleed valve on jack is closed.

***** Do not under any circumstances attempt any repairs.
Call your local HireDepot office for any operating concerns.*****

Note: This operating and safety brochure is intended as a guide only. It does not override license requirements nor is it suitable as an operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.