

## Pressure washer (electric)

*(Guide only)*

### BEFORE STARTING (VERY IMPORTANT)

1. Read the hazard assessment sheet.

**THE PRESSURE WASHER MUST BE LAYING FLAT ON THE GROUND BEFORE OPERATING. TO CHECK THAT THE MACHINE IS IN THE RIGHT POSITION:**

1. The machine should be resting on the wheels at the rear, and on the rubber mounts at the front.
2. In the correct position the pressure hose will be directly ABOVE the inlet garden hose.

**FAILURE TO HAVE THE MACHINE IN THE CORRECT POSITION WILL CAUSE MAJOR DAMAGE TO THE MACHINE AND THE PERSON RESPONSIBLE FOR HIRING THE MACHINE WILL BE LIABLE.**

### OPERATION

1. Ensure the machine is in the upright position (see above).
2. Connect the inlet and outlet hoses to the machine.
3. Turn the switch 'on'.
4. Do not leave the machine running without constant water running through the machine. If you are not using the water jet for a period longer than 10-20 seconds turn the machine off. Failure to do so can cause the valves to overheat and the motor will seize.
5. When finished, release the pressure from the hose before disconnecting. Do this by squeezing the trigger, after the machine is turned off.

### TROUBLESHOOTING

Problem	Possible solution

**Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.**

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.