

## Skid steer loader (Bobcat)

(Guide only)

### BEFORE STARTING

1. Persons using this machine must be a licensed or competent experienced operator.
2. Read and understand the hazard assessment sheet.
3. Ensure area is suitable for Bobcat operation and no bystanders are present.

### TO START THE ENGINE

1. Lower the seat bar.
2. Engage the parking brake.
3. Set the throttle to the half throttle position.
4. Turn the key left to the "GLOW" position. Wait for the "GLOW" light to turn off.
5. Turn the key to the start position and release it when the engine starts.

### TO STOP THE ENGINE

1. Pull the throttle fully backward to decrease the engine RPM.
2. Turn the key switch to the "OFF" position.

### TO OPEN / CLOSE THE BUCKET

#### 4SDK – 4 (1.1 TON)

The four in 1 control is the middle foot operated peddle or sideways motion of the right hand control lever.

#### 4SDK – 5 (1.6 TON)

The four in 1 control is done by sideways motion of the right hand control lever.

### SPECIFICATIONS

Safe working load	320kg
Weight	1100kg
Fuel	Diesel

### WARNING

Before you leave the operator's seat:

1. Park machine on level ground.
2. Lower the lift arms, put attachment flat on the ground.
3. Stop the engine.
4. Engage the parking brake.
5. Raise the seat bar.

### TROUBLESHOOTING

Problem	Possible solution
Loud buzzer noise when operating.	Ensure handbrake is off.
Bucket controls won't move.	Ensure safety bar is 'locked' down.

## MANDATORY PERSONAL PROTECTIVE EQUIPMENT



**Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.**

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.