

Vibrating plate

(Guide only)

BEFORE STARTING (VERY IMPORTANT)

1. Read and understand the hazard assessment sheet.
2. Do not attempt a single person lift. Always use two people with the correct lifting posture, or a mechanical lift.

TO START THE ENGINE

1. Move ignition switch to the 'on' position.
2. Set the throttle to the half throttle position.
3. If the engine is cold, turn the choke lever to the 'on' position.
4. Turn the fuel tap on.
5. Crank the pull cord, until the engine starts.
6. Once the engine is running turn the choke off.

OPERATING PROCEDURE

1. To begin operation, bring the idle up to operating speed and this will automatically engage the clutch.
2. Firmly grip both handles during operation to maintain control.

SPECIFICATIONS (full size)

| | |
|-----------|-----------------|
| Weight | 90kg |
| Length | 1000mm |
| Height | 900mm |
| Width | 500mm |
| Power | Unleaded petrol |
| Transport | Ute/Van/Trailer |

SPECIFICATIONS (half size)

| | |
|-----------|-----------------|
| Weight | 40kg |
| Length | 700mm |
| Height | 500mm |
| Width | 300mm |
| Power | Unleaded petrol |
| Transport | Car |

MANDATORY PERSONAL PROTECTIVE EQUIPMENT



TROUBLESHOOTING

| Problem | Possible solution |
|---------|-------------------|
| | |

Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.