

Wacker rammer

(Guide only)

BEFORE STARTING (VERY IMPORTANT)

1. Read the hazard assessment sheet.

OPERATION PROCEDURE

1. To begin operation, bring the idle up to operating speed and this will automatically engage the clutch.
2. Firmly grip both handles during operation to maintain control.

TO START THE ENGINE

1. Move ignition switch to the 'on' position.
2. Set the throttle to the half throttle position.
3. If the engine is cold, turn the choke lever to the 'on' position.
4. Turn the fuel tap on.
5. Crank the pull cord, until the engine starts.
6. Once the engine is running turn the choke off.

TO STOP THE ENGINE

1. Release the throttle to the idle position.
2. Allow the engine to cool at idle for 1 min.
3. Place the idle control in the off position.
4. Turn the fuel tap off.

SPECIFICATIONS

Weight	70kg
Length	680mm
Height	970mm
Width	350mm
Power	2 stroke petrol.
Transport	Trailer, utility vehicle.

MANDATORY PERSONAL PROTECTIVE EQUIPMENT



TROUBLESHOOTING

Problem	Possible solution

Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.