

Wall chaser

(Guide only)

CAUTION

Observe nationally applicable regulations including, for example, accident prevention regulations issued by trade associations and regulations concerning the general requirements to be met by workplaces on construction sites.

ADJUSTING THE CUTTING DEPTH

1. Press the two depth adjustment buttons and hold them in the pressed position.
2. Set the desired cutting depth according to the depth scale.
3. Release the two depth adjustment buttons.

SLITTING

CAUTION

When switching on, the machine must be in the starting position. You may lose control of the machine if the diamond discs are in contact with the material to be cut when you switch the machine on.

1. Position the machine on the material in which the slits are to be cut.
NOTE The cutting line pointer indicates the position of the first diamond disc.
NOTE The working direction is indicated by the cutting direction arrow.
2. Push the on/off switch to the side, press it in and hold it in the pressed-in position.
3. Press the plunge movement lockbutton and hold it in this position.
4. Apply reasonable pressure to the front grip of the machine, causing the discs to plunge slowly into the material to be cut until the preset cutting depth is reached.
5. Guide the machine with both hands, applying reasonable pressure in the cutting direction.
NOTE Application of excessive pressure in the cutting direction when slow cutting progress is made may result in overheating and irreparable damage to the diamond discs.
NOTE Application of excessive pressure in the cutting direction when slow cutting progress is made may cause the motor to stall.



DANGER

After lifting the machine away from the working surface, release the plunge movement lockbutton. This will lock the parts of the machine in their original starting position.

6. Release the on/off switch if you wish to interrupt or end the slitting operation.
7. Diamond cutting discs that project from the machine present a risk of injury.

Lift the machine away from the working surface without pivoting or tilting it and then release the plunge movement lockbutton.

SHARPENING THE DIAMOND DISCS

CAUTION

Never hold the sharpening plate against the rotating diamond cutting discs.

1. Lay the sharpening plate flat (not on its edge) on a solid, flat surface (concrete) and secure it in position.
2. Set the machine to cut to a depth of 15 mm.

SHARPENING THE DIAMOND DISCS (CONT'D)

3. Hold the machine securely with both hands and guide it towards the sharpening plate that is fixed in position.
4. Make two to three cuts across the sharpening plate.

WORKING WITH THE MACHINE

Work in a downwards direction when making vertical cuts.

Do not pivot or tilt the machine while guiding it.

NOTE It is not possible to cut curves. Select the right type of diamond disc for the material to be cut. If cutting performance drops, check whether the diamond cutting discs are badly worn or if they need to be replaced or sharpened.

MANDATORY PERSONAL PROTECTIVE EQUIPMENT



TROUBLESHOOTING

Problem	Possible solution
Faulty supply cord or plug is defective	Contact Hiredepot for further support.
No electric power	Check the electricity supply. Connect the machine to a functioning electric supply.
The carbon brushes are worn	Contact Hiredepot for further support.
Machine overloaded due to application of excessive cutting pressure	Reduce cutting pressure.
Machine overheated due to prolonged overloading	Allow the machine to cool down (running without load accelerates cooling). After cooling, switch off and then on again in order to operate the machine at full power.
Low cutting performance (diamond discs unsuitable for material to be cut)	Use suitable diamond cutting discs.
Low cutting performance (diamond discs badly worn or inadequately sharpened)	Change or sharpen the diamond cutting discs.

Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.

When service matters.
hiredepot.com.au

GLEN IRIS
 70 High St
 9885 4431

FAIRFIELD
 323 Darebin Rd
 9499 9955