

100,175 CFM compressor

(Guide only)

BEFORE STARTING

1. Open the air tap to allow air to flow.

TO START THE ENGINE

1. On models with an offload valve (marked), move the offload valve to the 'start' position.
2. On models with a bypass button, press the bypass button.
3. If engine is cold, hold the key in the glow position for 20 seconds.
4. Turn the key to start.
5. Move the offload valve to the 'run' position.

TO STOP THE ENGINE

1. Pull the 'stop' knob.
2. Release the air pressure.
3. Turn the key to the 'off' position.

TROUBLESHOOTING

Problem	Possible solution

MANDATORY PERSONAL PROTECTIVE EQUIPMENT



Do not under any circumstances attempt any repairs. Please call your local Hiredepot office for assistance.

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.