

Guide only

### Before Starting

1. Persons using this machine must be a licensed or competent experienced operator.
2. Read the Hazard assessment sheet.
3. Ensure area is suitable for Bobcat operation and no bystanders are present

### To start the Engine

1. Lower the seat bar.
2. Engage the parking brake.
3. Set the throttle to the half throttle position.
4. Turn the key left to the "GLOW" position. Wait for the "GLOW" light to turn off.
5. Turn the key to the start position and release it when the engine starts.

### To stop the Engine

1. Pull the throttle fully backward to decrease the engine RPM.
2. Turn the key switch to the "OFF" position.

### WARNING!!

Before you leave the operator's seat:

1. Park machine on level ground
2. Lower the lift arms, put attachment flat on the ground
3. Stop the engine
3. Engage the parking brake
4. Raise seat bar

### To Open / Close the bucket

4SDK – 4

The four in 1 control is the middle foot operated peddle.

4SDK – 5

The controls to open/close the bucket

### Specifications:

Safe Working Load: 320kg  
 Weight: 1100kg  
 Fuel: Diesel

### Trouble Shooting

Problem	Possible Solution
Load buzzer noise when operating	Ensure handbrake is off
Bucket controls won't move	Ensure Safety bar is 'locked' down

### Mandatory Personal Protective Equipment:



Dust Mask Protection



Foot Protection



Hearing



Goggles Clothing



Protective Safety

**Do not under any circumstances attempt any repairs. Call your local HireDepot office.**

This operating and safety brochure is intended as a guide only. It does not override license requirements nor is it suitable as an operating lesson.

If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.