

## Scissor lift - FREEWHEEL OVERRIDE #3584 Haulotte

(Guide only)

**This machine has electric freewheel.**

Refer to picture:

1. Locate freewheel switch under red cover to right hand side of emergency stop button.
2. Lift cover and operate switch to release brake.



### WARNING

With brake released there are now **no brakes.**

After moving machine:

1. Engage brakes by returning switch to normal position and closing red cover.

This will allow brakes to operate normally.

Other controls:



**Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.**

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.