

Operating Procedure

Vibrating Plate

Guide only

Before Starting

1. Read and understand the Hazard Assessment sheet.
2. Do not attempt a single person lift. Always use two people with the correct lifting posture, or a mechanical lift.

Specifications – Full Size:

Weight: 90kg
Length: 1000mm
Height: 900mm
Width: 500mm
Power: Unleaded petrol.

To start the Engine

1. Move ignition switch to the 'on' position.
2. Set the throttle to the half throttle position.
3. If the engine is cold, turn the choke lever to the 'on' position.
4. Turn the fuel tap on.
5. Crank the pull cord, until the engine starts.
6. Once the engine is running turn the choke off.

Specifications - Half Size:

Weight: 40kg
Length: 700mm
Height: 500mm
Width: 300mm
Power: Unleaded petrol.

To stop the Engine

1. Release the throttle to the idle position
2. Allow the engine to cool at idle for 1 min.
3. Place the idle control in the off position.
4. Turn the fuel tap off.

Transport:

Full Size - Ute/Van/Trailer.
Half Size - Car.

Operating Procedure

1. To begin operation, bring the idle up to operating speed and this will automatically engage the clutch.
2. Firmly grip both handles during operation to maintain control.

Mandatory Personal Protective Equipment:



Dust Mask



Foot
Protection



Hearing
Protection



Goggles



Protective Safety
Clothing

Trouble Shooting

Problem	Possible Solution

Do not under any circumstances attempt any repairs. Call your local HireDepot office.

This operating and safety brochure is intended as a guide only. It does not override license requirements nor is it suitable as an operating lesson.

If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.