

Snorkel boom lift

(Guide only)

BEFORE USE

1. Read and understand the Hazard Assessment Sheet.
2. Persons using this machine must be a licensed or competent experienced operator.
3. Ensure area is suitable for operation of the boom lift.

TRANSPORT

NOTE: Failure to follow the steps below may result in the machine overturning or serious injury.

1. Ensure the towball attachment is secure and the safety chain and emergency brake wire is secured to the vehicle.
2. Maximum towing speed 80km/h.

MACHINE SETUP (Important points)

1. Disconnect machine from vehicle before use. Failure to do so may break the tow ball clip.
2. When setting the machine up, lower the front outriggers first. When packing machine up, raise the rear outriggers first. Failure to do so may break or damage front jockey wheel.
3. Rear light bar may need to be removed, especially if transporting the machine through narrow pathways.

MACHINE SETUP

1. Ensure all red stop buttons are not pressed in. Rotate each clockwise, and pull out.
2. Insert the key and switch to 'BASE'.
3. Flick the switch next to it to 'STABILISERS'.
4. Lower outriggers fully, and raise to level.
5. Ensure Green "Level Light" is on, indicating the snorkel boom is level.
6. Remove travel pins, half way up boom and near the tow point.
7. Turn key to 'PLATFORM'.
8. Flick switch to 'BOOM'.
9. In bucket, put foot on pedal, and switches as labelled to operate.



Stay alert, don't get hurt

MACHINE PACKUP

To pack the machine up follow the reverse of the setup whilst taking note of the following:

1. Ensure wheels are in towing position.
2. When lowering bucket, ensure the lug on the underside of the boom arm is seated properly in position.
3. Raise the rear outriggers first.
4. Remove key before transport.

CHARGING THE MACHINE

Do not use machine whilst connected to mains power. Failure to do so may result in damage to the machine. Do not use extension leads greater than 25 metres.

MANDATORY PERSONAL PROTECTIVE EQUIPMENT



TROUBLESHOOTING

Problem	Possible solution

Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.