# **OPERATING PROCEDURE**

# **HIRE DEPOT**

## Airless spray painter


### STARTUP




**1.** Place drain hose in waste pail and siphon hose in paint pail.



**2.** Open drain valve. Run sprayer until paint appears from drain hose. Turn off sprayer and close drain valve.

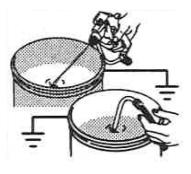

**3.** Place drain hose in paint pail. Trigger gun into waste pail and run sprayer until paint appears from gun.

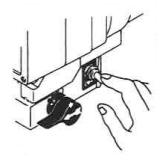

**4.** Turn off sprayer. Follow PRESSURE RELIEF procedure.




**5.** Reassemble drain hose to siphon hose.

## SHUTDOWN

**1.** Turn off sprayer. Follow PRESSURE RELIEF instructions before proceeding.

**2.** Perform FLUSHING procedure.

### SPRAY

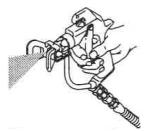

You are now ready to spray! Turn sprayer on, trigger gun and increase pressure to desired setting.

**2.** Always follow PRESSURE RELIEF procedure whenever you stop spraying.

### When service matters. hiredepot.com.au

**GLEN IRIS** 70 High St 9885 4431

#### FAIRFIELD

323 Darebin Rd 9499 9955